


# INSTALLATION MANUAL

## Rubber Modular Matting



### Connecting the Skywalker HD™ and Cushion Ease™ Series

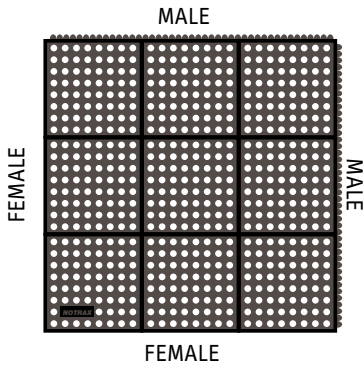



### Putting your custom configuration together

1. Take the custom drawing you received with the numbered sections on it
2. Start connecting the numbered sections


**The tiles have two female sides and two male sides. Each tile has a notrax® logo on the bottom left.**

1. Lay the mats that need to be connected next to each other
2. Connect the tile with the female side to the other tile on the male side
3. Male connectors must align exactly with their corresponding female connectors to be able to connect mats
4. Mats can be shifted every 30,48 cm and cannot be shifted one connector up or down
5. Press firmly, piece by piece until the mats are completely aligned

# Connecting Safety Stance™ Series and Connectors

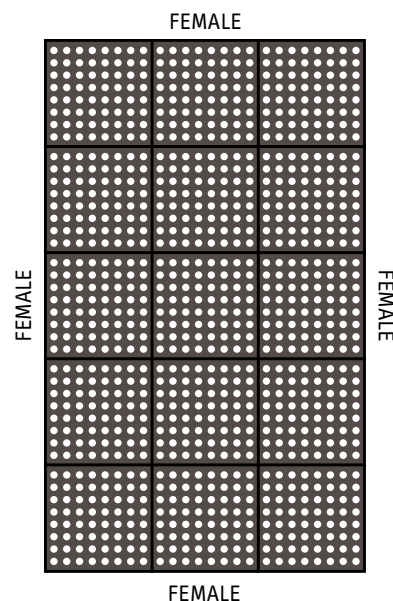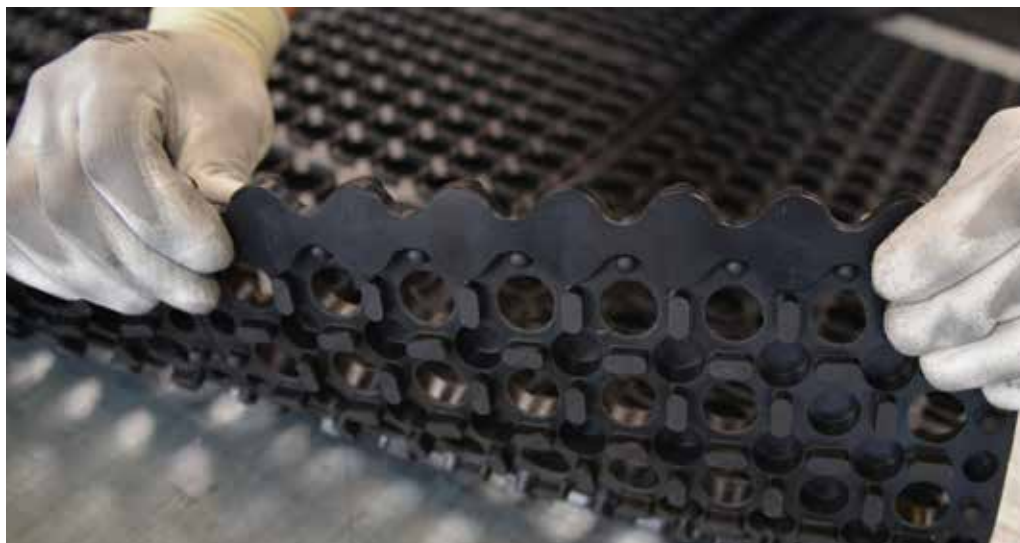

**The tiles of the Safety Stance™ series has only female sides. If you want to connect the tiles together you should make use of the Safety Stance™ connectors accessory.**

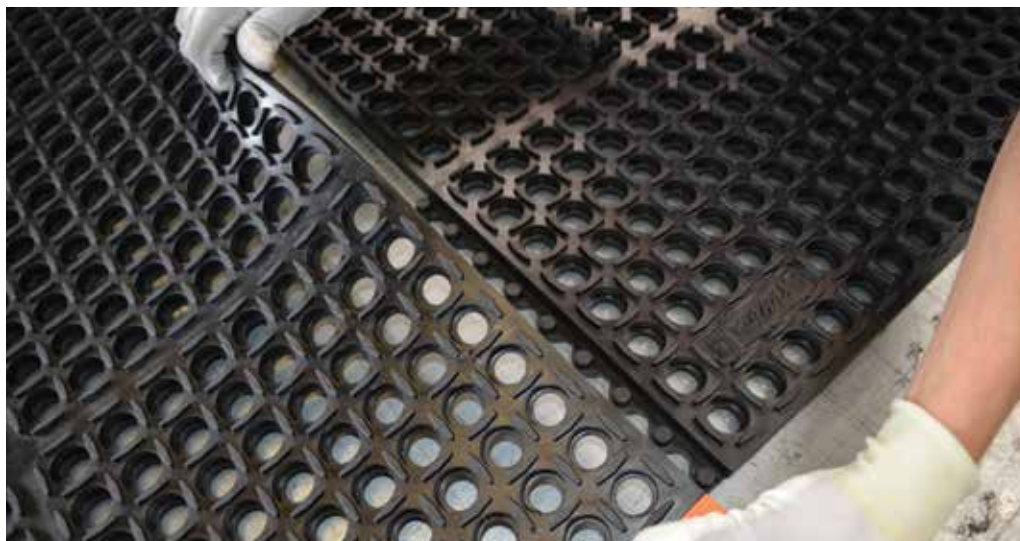

1. Press firmly until the whole connector is attached to it
2. Take the other mat and press it firmly on to the connector
3. Do this with the whole length of the mat to connect them firmly together are completely aligned



## Adding bevels

1. Align the bevels with the mat
2. Apply 086 Notrax® Super Glue on side of bevel (on the male connectors of the bevel)
3. Connect the mat to the bevel
4. Press bevel firmly to set the glue
5. Wipe off any excess immediately